

UFREE 

UFREE GROUP (CHINA) COMPANY LIMITED



UFREE-HORSE

WALK WITHOUT ANY POWER

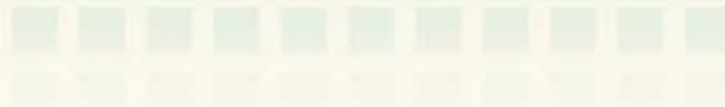


Table of Contents

Warning.....	1
I. Introduction.....	1
II. Specifications.....	2
III. Operations.....	3
IV. Precautions and Safety.....	4
V. Trouble Shooting.....	6
VI. Transport and Storage.....	8
Warranty Card.....	9



Warning

- a. Children between 3 and 6 years old should be supervised by adults when riding UFREE-HORSE
- b. Riders whose weights exceed 60kg shouldn't ride the small UFREE-HORSE UH-02, and whose weights exceed 90kg shouldn't ride UH-01.
- c. Small parts can be swallowed. Cord on toy present potential entanglement hazard
- d. Do not ride on the downhill path that the gradient is more than 15° .
- e. Only adults can assemble, disassemble and clean the horse.
- f. Not suitable for children under 3 years.



I. Introduction

UFREE-HORSE is a new and unique toy of our company.

The novelty of UFREE-HORSE lies in the fact that it can “walk without any power”---it doesn't need any battery or petrol power to make it run. It can walk simply depending on the rider's weight. The horse will run when rider's body move up and down pressing on the saddle continually, just like

the action of riding a real horse.

UFREE-HORSE has very similar appearance with the real horse. It is delicately made of high-grade plush material, fitted with high quality leather, covering the sturdy steel frame and complicated drive system.


UFREE-HORSE can be put in various places as your house, garden, squares, parks, amusement ground. It only needs a flat and hard ground. Riders can play horse racing game together. Furthermore, it is good fitness equipment for muscles of waist, abdomen and legs.

UFREE-HORSE makes you experience the fun of riding a real horse even if you are in a city.

II. Specifications

Technical Parameter	UFREE-HORSE Model No.	
	UH-02	UH-01
Single-Step Distance	25-30cm/10-12inch	42-50cm/17-20inch
Minimum Radius of Turn	120cm/47inch	200cm/79inch
Suitable Rider's Weight	15-60kg/33-132lbs	35-90kg/77-198lbs
Length	77cm/30inch	120cm/47inch
Width	33cm/13inch	46cm/18inch
Head Height	87cm/34inch	134cm/53inch
Saddle Height	63cm/25inch	92-98cm/36-39inch

Back Height	54cm/21inch	80cm/31inch
Net Weight	15kg/33lbs	30kg/66lbs

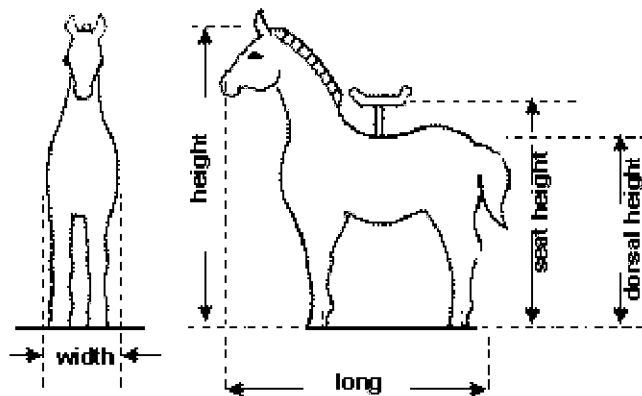

III. Operation.

Repeat two actions and then the horse will walk:

1. Step on the stirrup and hold the handles on the horse head with your hands, sit down on the saddle;
2. Stand up on the stirrup, pull the hand bar towards yourself at the same time.

Repeat these actions to make the horse go forward. Turn the handles can make the horse turn left or

right.

IV. Precautions and Safety

1. Riders should select different types of horses and suitable **stirrup** according to the heights and weights. The weights should not exceed the load capacity.
2. Riders can only sit on the saddle instead of sitting on the horse body.
3. Riders mustn't drag and pull or run foul of each other when riding on the horses.
4. The horse can only go forward. Don't pull the horse backward forcedly.
5. If the horse falls over, press down the saddle with hands for several times after it is lifted. Then check whether the plastic body cover is misplaced and whether it can move normally. If it is abnormal, please don't use it until it is repaired.
6. Don't stretch your hand between the saddle and the horse body in case of your hand being squeezed.
7. Don't twist the clamp nuts on the two ends of the wheel axles too tightly to avoid breaking the wheel axles.
8. Only adults can assemble, disassemble and clean the horse.
9. User may dry-clean UFREE-HORSE fur. If you choose to wash the fur by water, you have first to cut the thread used for fixing the zipper fastener. Comb the mane with a brush after washing it.
10. Open the horse fur to check UFREE-HORSE in several months. Don't use it until the problems

have been solved. Check as follows:

- a. Unload the saddle and handles first, then unzip the fur.
- b. Check whether all the clamp nuts or clips of the frame are fastened. Fasten them if necessary.
- c. Check whether the split pins are separated. Supply it at once if so.
- d. Check whether the spacing spring and the restoring spring are effective.
- e. Check whether the wheels are turning flexibly and the one-way rotation is reliable.
- f. Check whether the steering spacing of the horse neck is reliable and that there is a clearance between the steering connection board and the front leg crossbeam at the limiting position of steering.
- g. Place the horse on the flat ground and check whether the four wheels touch down the ground simultaneously.
- h. Check whether the handles are firmly fastened.
- i. Check whether the plastic body cover is misplaced.
- j. Check whether all the turning axles are well lubricated.

V. Trouble Shooting

No.	Trouble phenomenon	Possible cause	Solution
1	The horse legs can't restore.	The lower restoring spring of the saddle lapses, or the welding position of the spring upper pressure plate is separated.	Replace the spring or weld the upper pressure plate again.
		The plastic body cover is misplaced, which causes friction with the flexible parts.	Adjust position of the plastic body cover to make the four supporting points contact with the four angles of the frame crossbeam completely.
		The turning of the rear wheel is reverse.	Unload the reversed wheel, turn it around and reinstall it correctly.
2	The saddle cannot be pressed down and the horse walks hard.	The plastic body cover is misplaced, which causes friction with the flexible parts.	Adjust the position of the plastic body cover to make the four catch points contact with the four angles of the frame crossbeam completely.
		The turning of the front	Unload the reversed wheel, turn it

		wheel is reverse.	around and reinstall it correctly.
		The rider is not heavy enough to reach the lower limit of the load bearing.	Make sure the weight of the rider exceeds 15kg
		The ground is uneven and the wheels are blocked.	Choose a flat ground and remove the obstacle in front of the wheels.
3	The horse legs can be opened and closed, but the horse doesn't go forward.	The wheel rotates bidirectional.	Replace it with a new one.
		The ground is too slippery as a result of water or sand etc.	Clean the ground.
4	The horse makes some noises when walking.	Poor lubrication.	Open the horse fur and fill some grease at each turning axle.
		The clamp nuts are loose.	Tighten the clamp nuts on each turning axle properly on condition that the four wheels are guaranteed to be of the same height.

5	The limiting distance between the front legs and the rear legs becomes shorter after the horse legs reset.	The small spacing spring is not available.	Change the relative parts.
---	--	--	----------------------------

VI. Transport and Storage

1. Store the horse in a dry and ventilated place when it is not in use.
2. Keep the horse in a state of standing straight and never lay it down when it is stored.
3. Be sure to carry the handle and saddle with hands when lifting the horse.

Warranty Card

Service hot line: +86-512-68093463

Email: support@ufree-horse.com

UFREE GROUP (CHINA) COMPANY LIMITED warrants UFREE-HORSE including supplied accessories against defects in material or workmanship for __ months. UFREE will repair or replace it.

This warranty will be invalidated if:

1. The date is out of the warranty;
2. Damage caused from not using according to the instructions;
3. Type of the product in the Warranty Card is not in accordance with the product itself;
4. No Warranty Card and invoice;
5. Damaged by force majeure.

Please take care of this card!

The following blank should be filled by the buyer, thank you for cooperation!

Information of buyer	Name		Model		Date	
	Address					
	Tel		Email			

Buyer Sign:

Dealer Sign:

The following blank should be filled by the dealer, thank you for cooperation!

Information of Dealers	Name		Invoice No.	
	Address			
	Tel		Fax	
	Date		Email	

Maintenance Records:

	Date	Maintainer Name	Information
I			
II			
III			

UFREE-HORSE is designed and manufactured by UFREE GROUP (CHINA) COMPANY LIMITED.

UFREE-HORSE[®] is a registered trade mark of UFREE GROUP (CHINA) COMPANY LIMITED.

UFREE-HORSE OFFICIAL WEBSITE

www.ufree-horse.com